

S1 61 Arias 8.3L/Fontana Rhino Mount
Accessory Drive Position
All pump configurations & options available

Bolt Pattern for Arias & Fontana Covers
Mill along dotted line for screw blower drive clearance

Mount Configurations
All AVIAID Mounts are integral to pump. No adapters are required. Separators are .16" or .25" wide. Mount drawings are full size. "Xxxx" indicates hex size in 1/16ths. "xXxx" indicates separator width (1 = .16", 2 = .25", 5 = .50"). "xxXX" indicates Mount #.

