

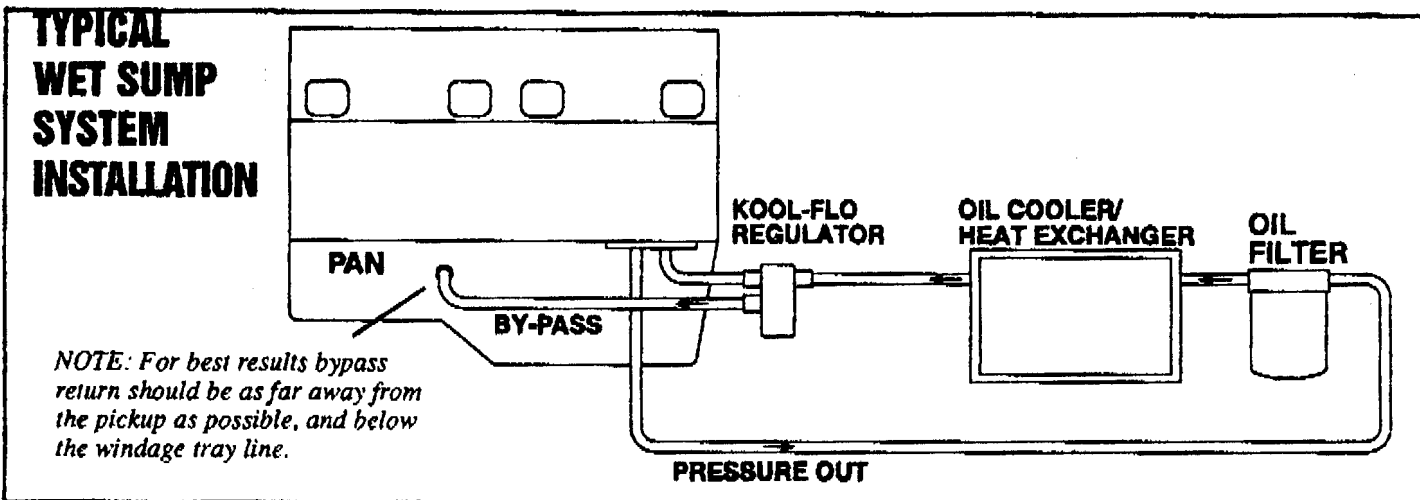
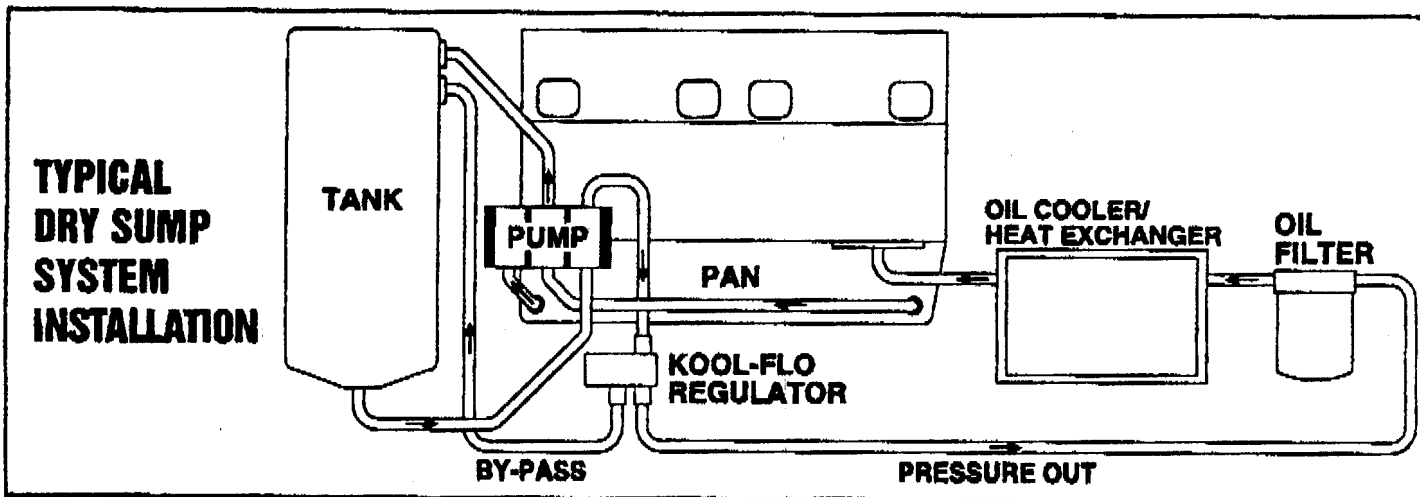
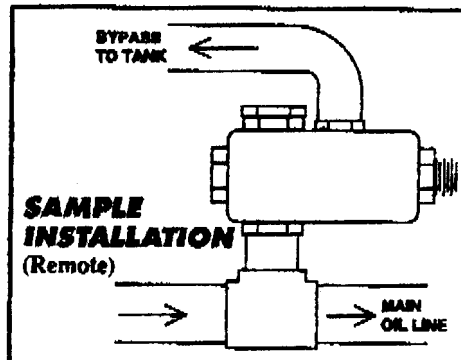


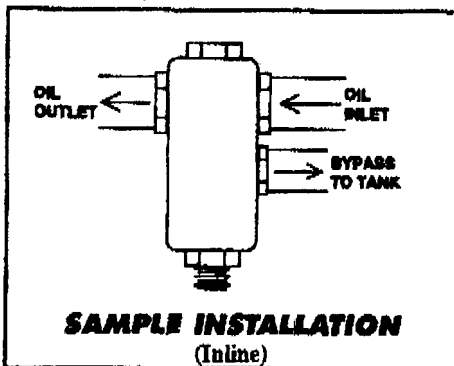

# KOOL-FLO REGULATOR INSTALLATION INSTRUCTIONS

**OVERVIEW** - The Kool-Flo pressure regulator is a bi-directional bypass device that can be mounted virtually anywhere in the system. As long as there is an oil pressure feed going into the Kool-Flo, and a return line going back to the tank or pan, it will maintain the desired oil pressure limits. Please note that the Kool-Flo can be mounted in-line at various points on the oiling system using all three passages (pressure in, pressure out, bypass) or it can be "dead ended" running off a "T" in the pressure line with the "pressure out" orifice plugged.

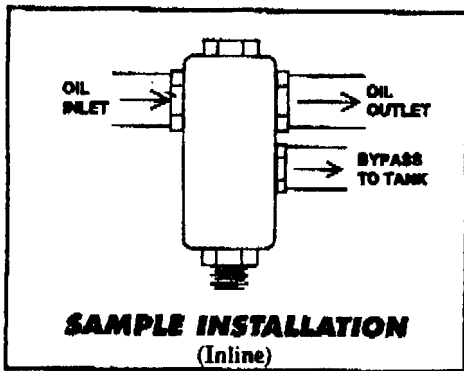

## ADJUSTING PRESSURE

Kool-Flo comes from the factory preset at the midway point. To increase oil pressure loosen the jam nut, turn the set screw clockwise, and retighten the nut. To reduce the oil pressure, back the set screw out counterclockwise.

10041 Canoga Avenue  
Chatsworth CA 91311  
(818) 998-8991  
(818) 998-8993 fax

## MAINTENANCE

As with other elements of a high performance lubrication system, the Kool-Flo should be cleaned before use and periodically thereafter. Recommended procedure includes soaking the device in solvent and blowing out the residue with air pressure.